



# Quick Start Guide

**You must use these steps after fully charging your batteries to reset the battery cap before every flight.**

1. With the battery cap separated from the Phantom, take the reset adapter and plug the yellow XT60 plug into one of the packs main leads (This can be either a 3 cell or a 4 cell pack) and plug the tap end into the tap on the cap. Power on the cap as normal and wait until there is only 1 green flashing light (5-10 seconds). Now power down the cap as normal.
2. Unplug the reset adapter from the cap and battery. Plug the small 3S tap and the XT60 plug from one of your fully charged packs into the battery cap. Hold down the power button until you get a full green LED bar reading and then let go. The red light should be flashing. Allow 5-10 seconds for the cap to power off on its own.
3. Now you are ready to fly! Plug in XT60 from second fully charged battery into other XT60 plug on cap. Plug cap into the Phantom 2 and power up your cap.

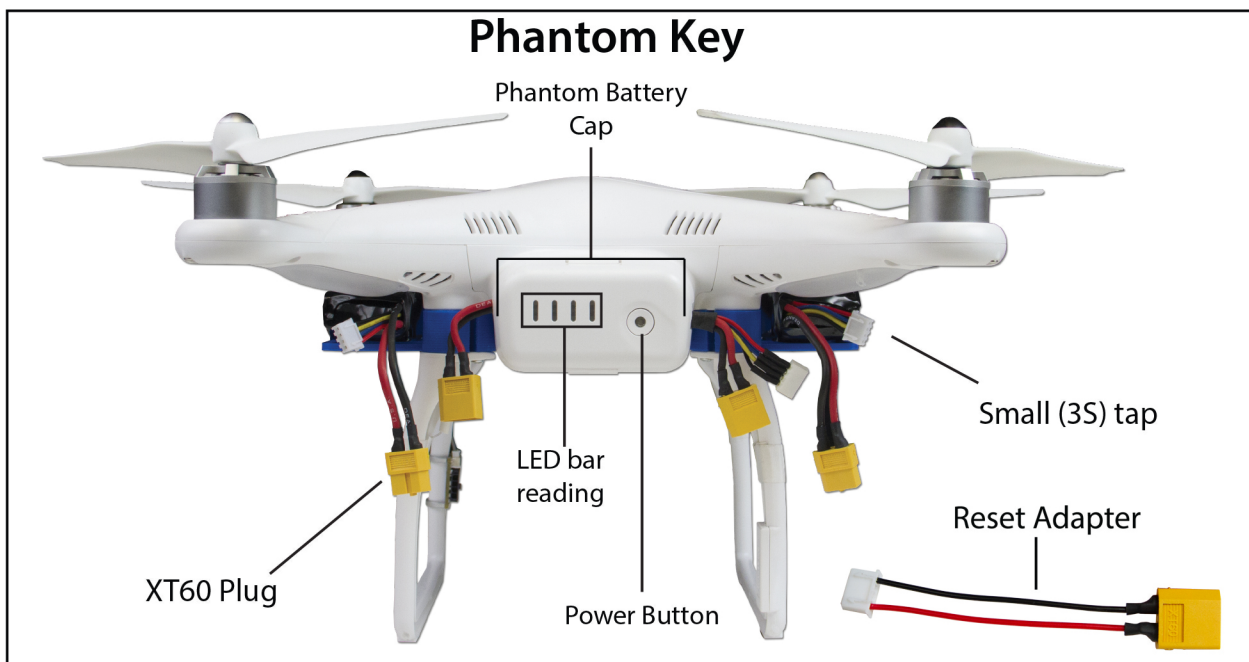

After you have flown the batteries, disconnect the battery plugs from the battery cap and charge up the batteries using your hobby grade charger. Always charge the packs completely before you reset your battery cap to full green LED lights.

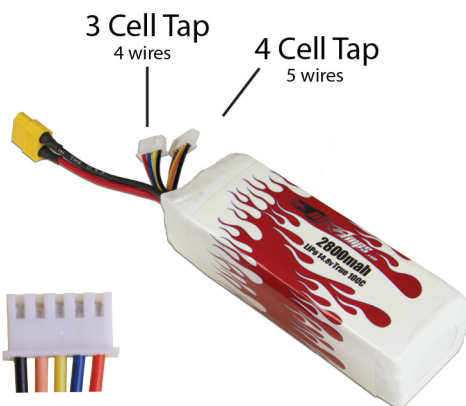

## IMPORTANT!

When using our 4S batteries, ALWAYS use the 4 cell tap (the larger 5-pin tap) for charging and the 3 cell tap (the smaller 4-pin tap) when plugging the pack into the Phantom cap.

