


This drawing shows the back or outside of the shade.

Short dashed line are cut on the back side or outside of the shade.

Long dashed line are cut on the inside of the shade.

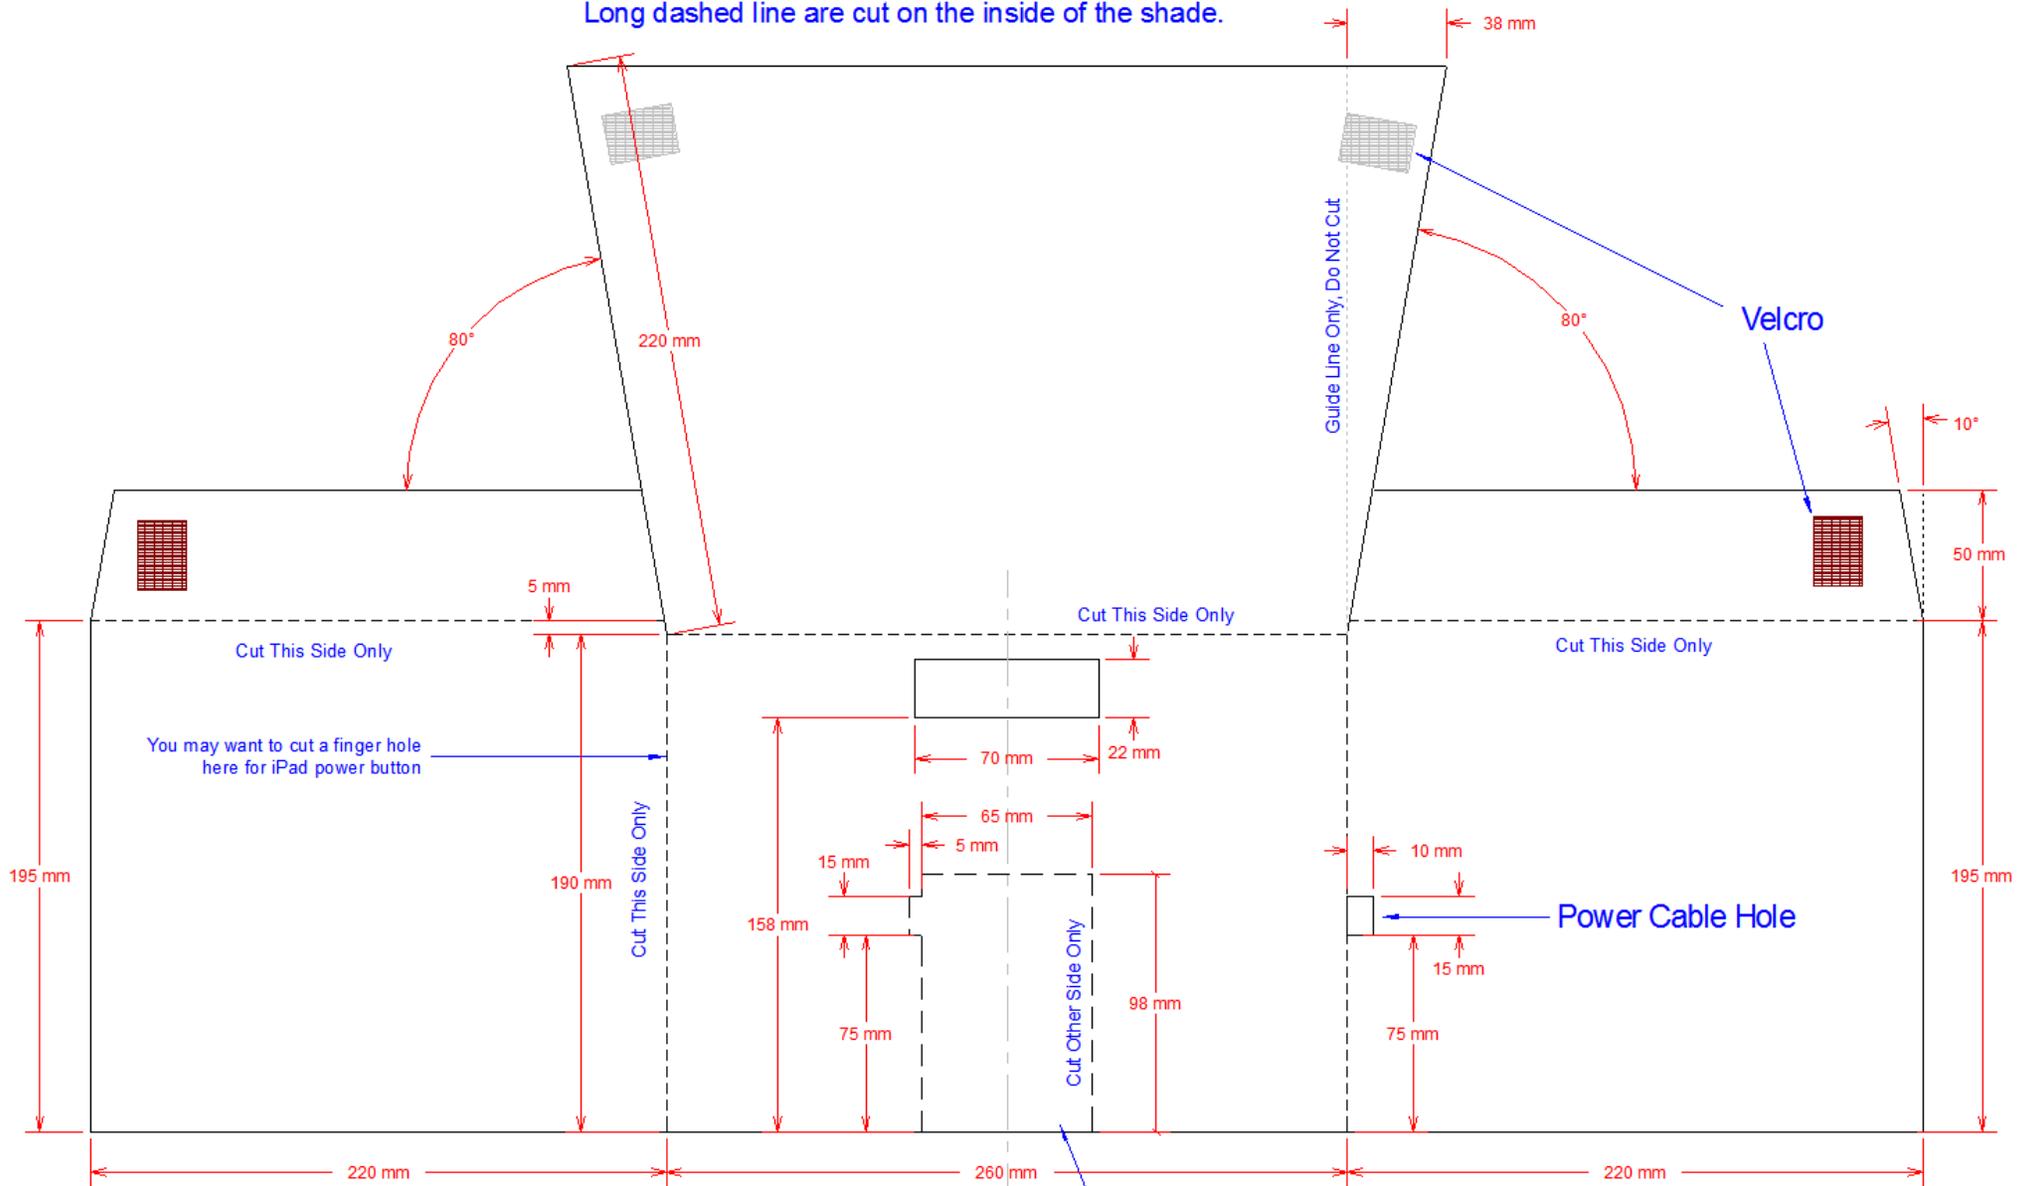

After cutting, but before applying the Velcro, spray the inside of the shade with flat black spray paint.

Allow this to dry, then apply the Velco.

After cutting the inside of the shade, carefully peel the inside skin and foam away from the outside skin. This leaves just the outside skin remaining.